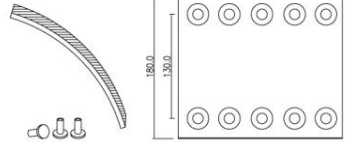
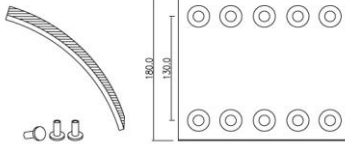
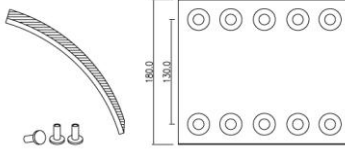
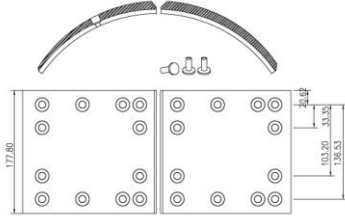
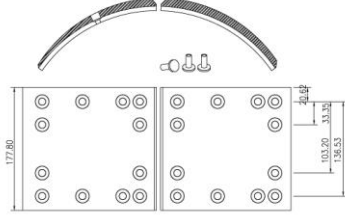
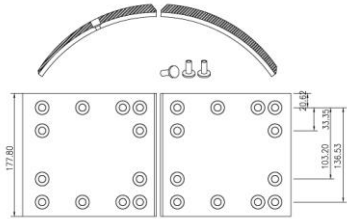
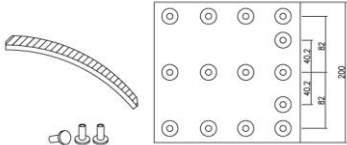
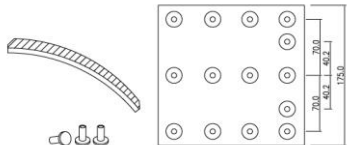
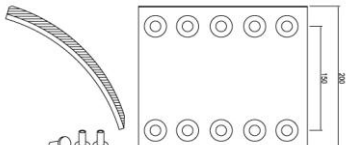
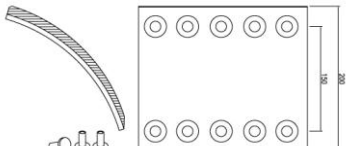







Forro de Freno de Tambor

BP Ref.	Ref. Original	Descripción	Ilustración	Aplicación
BP19032-180WR	BPW 0309226010 BPW 0309226110 BPW 0309226210 BPW 0309226260 BPW 0309226320 BPW 0309226450 BPW 0309226560 BPW 0309226760 BPW 0309226850 BPW 0509146090 KAESSB 8241999328 KAESSB 8241999733 SAF 1057001200 SAF 1057301200 SAF 3057311200	Trommelbremsbelag, 1Set - 8 Stück mit Nieten, 180 mm Brake Lining, 1Set - 8 pieces with rivets, 180 mm Forro de Freno, 1 jgo. – 8 pzas. con remaches, 180 mm		BPW, SAF, FRUEHAUF, KAESSBOHRER
BP19032-190WR	BPW 0309226030 BPW 0309226570 BPW 0309226770 BPW 0309226860 KAESSB 8241999329 KAESSB 8241999734 SAF 1057001210 SAF 1057301210 SAF 1057991210 SAF 3057311210	Trommelbremsbelag, 1Set - 8 Stück mit Nieten, 190 mm Brake Lining, 1Set - 8 pieces with rivets, 190 mm Forro de Freno, 1 jgo. – 8 pzas. con remaches, 190 mm		BPW, SAF, FRUEHAUF, KAESSBOHRER
BP19032-200WR	BPW 0309226030 BPW 0309226570 BPW 0309226770 BPW 0309226860 KAESSB 8241999329 KAESSB 8241999734 SAF 1057001210 SAF 1057301210 SAF 1057991210 SAF 3057311210	Trommelbremsbelag, 1Set - 8 Stück mit Nieten, 200 mm Brake Lining, 1Set - 8 pieces with rivets, 200 mm Forro de Freno, 1 jgo. – 8 pzas. con remaches, 200 mm		BPW, SAF, FRUEHAUF, KAESSBOHRER
BP19036-185WR		Trommelbremsbelag, 1Set – 4+4 Stück mit Nieten, 185 mm Brake Lining, 1Set – 4+4 pieces with rivets, 185 mm Forro de Freno, 1 jgo. – 4+4 pzas. con remaches, 185 mm		FRUEHAUF, SAF, TRAILOR, YORK
BP19036-195WR		Trommelbremsbelag, 1Set – 4+4 Stück mit Nieten, 195 mm Brake Lining, 1Set – 4+4 pieces with rivets, 195 mm Forro de Freno, 1 jgo. – 4+4 pzas. con remaches, 195 mm		FRUEHAUF, SAF, TRAILOR, YORK






Forro de Freno de Tambor

BP Ref.	Ref. Original	Descripción	Ilustración	Aplicación
BP19036-205WR		Trommelbremsbelag, 1Set – 4+4 Stück mit Nieten, 205 mm Brake Lining, 1Set – 4+4 pieces with rivets, 205 mm Forro de Freno, 1 jgo. – 4+4 pzas. con remaches, 205 mm		FRUEHAUF, SAF, TRAILOR, YORK
BP19071-180WR	RENAULT 5001868089 VOLVO 3093259 VOLVO 3093263 VOLVO 3095169 VOLVO 85105383	Trommelbremsbelag, 1Set – 8 Stück mit Nieten, 180 mm Brake Lining, 1Set – 8 pieces with rivets, 180 mm Forro de Freno, 1 jgo. – 8 pzas. con remaches, 180 mm		VOLVO B/, B10, B12
BP19090-180WR	RENAULT 5001868087 VOLVO 270384 VOLVO 3095177 VOLVO 3095178 VOLVO 3098264 VOLVO 85105382	Trommelbremsbelag, 1Set – 8 Stück mit Nieten, 180 mm Brake Lining, 1Set – 8 pieces with rivets, 180 mm Forro de Freno, 1 jgo. – 8 pzas. con remaches, 180 mm		RENAULT V.I., VOLVO
BP19094-180WR	BPW 0309227010 BPW 0309227060 BPW 0309227150 BPW 0309227190 BPW 0309227240 BPW 0309227260 BPW 0309227430 BPW 0309227450 BPW 0309227530 BPW 0309227650 BPW 0309227710 BPW 0309227760 BPW 0509127790 KAESSB 8241999325 KAESSB 8241999735 SAF 1057301300 SAF 3057001300	Trommelbremsbelag, 1Set – 8 Stück mit Nieten, 180 mm Brake Lining, 1Set – 8 pieces with rivets, 180 mm Forro de Freno, 1 jgo. – 8 pzas. con remaches, 180 mm		BPW, SAF, FRUEHAUF, KAESSBOHRER
BP19094-190WR	BPW 0309227020 BPW 0309227220 BPW 0309227540 BPW 0309227630 BPW 0309227720 BPW 0309227770 KAESSB 8241999326 KAESSB 8241999736 SAF 1057241310 SAF 1057301310 SAF 3057001310	Trommelbremsbelag, 1Set – 8 Stück mit Nieten, 190 mm Brake Lining, 1Set – 8 pieces with rivets, 190 mm Forro de Freno, 1 jgo. – 8 pzas. con remaches, 190 mm		BPW, SAF, FRUEHAUF, KAESSBOHRER

Forro de Freno de Tambor

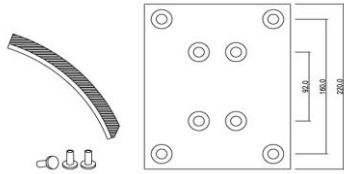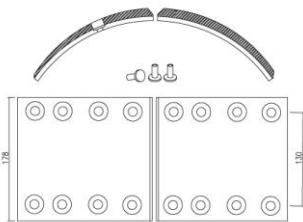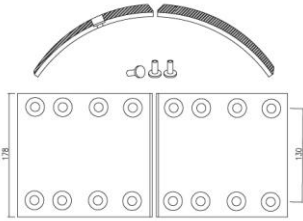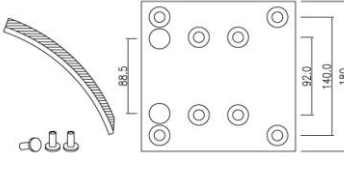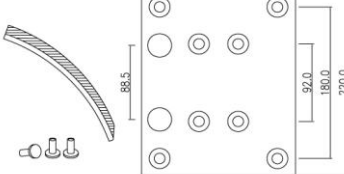BP Ref.	Ref. Original	Descripción	Ilustración	Aplicación
BP19187-185WR	RENAULT 5001019222 RENAULT 5001823240 RENAULT 5001855122 RENAULT 5001855146 RENAULT 5001860048	Trommelbremsbelag, 1Set – 8 Stück mit Nieten, 185 mm Brake Lining, 1Set – 8 pieces with rivets, 185 mm Forro de Freno, 1 jgo. – 8 pzas. con remaches, 185 mm		RENAULT V.I., MAGNUM, PREMIUM
BP19283-205WR	SAF 1057006000 SAF 1057006100 SAF 1057306000 SAF 1057306100 SAF 1057996000 SAF 1057996100 SAF 3057306000	Trommelbremsbelag, 1Set – 4+4 Stück mit Nieten, 205 mm Brake Lining, 1Set – 4+4 pieces with rivets, 205 mm Forro de Freno, 1 jgo. – 4+4 pzas. con remaches, 205 mm		SAF
BP19283-215WR	SAF 1057006000 SAF 1057006100 SAF 1057306000 SAF 1057306100 SAF 1057996000 SAF 1057996100 SAF 3057306000	Trommelbremsbelag, 1Set – 4+4 Stück mit Nieten, 215 mm Brake Lining, 1Set – 4+4 pieces with rivets, 215 mm Forro de Freno, 1 jgo. – 4+4 pzas. con remaches, 215 mm		SAF
BP19495-170WR	MAN 81502200551 MAN 81502210441 MAN 81502210451 MAN 81502210526 MAN 81502210645 MAN 81502210771 MAN 81502210784 MAN 81502210809 MAN 81502210850 MAN 81502210855 MAN 81502210908 MAN 81502216077 MAN 81502216097	Trommelbremsbelag, 1Set – 8 Stück mit Nieten, 170 mm Brake Lining, 1Set – 8 pieces with rivets, 170 mm Forro de Freno, 1 jgo. – 8 pzas. con remaches, 170 mm		MAN, MERCEDES- BENZ, STEYER
BP19496-170WR	MAN 81502006828 MAN 81502200661 MAN 81502200662 MAN 81502200663 MAN 81502210446 MAN 81502210531 MAN 81502210650 MAN 81502210681 MAN 81502210814 MAN 81502210860 MAN 81502210865 MAN 81502210913 MAN 81502210921 MAN 81502216081 MAN 81502216101 MAN 88502200040	Trommelbremsbelag, 1Set – 8 Stück mit Nieten, 170 mm Brake Lining, 1Set – 8 pieces with rivets, 170 mm Forro de Freno, 1 jgo. – 8 pzas. con remaches, 170 mm		MAN, MERCEDES- BENZ, STEYER, ERF

Forro de Freno de Tambor

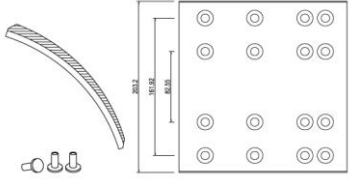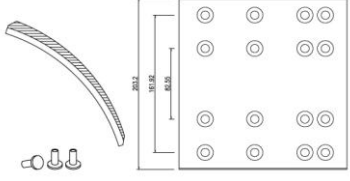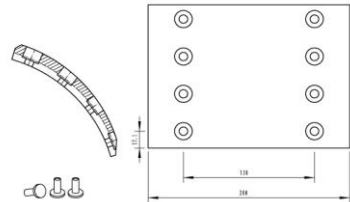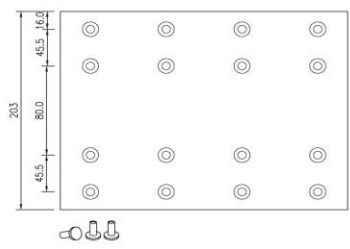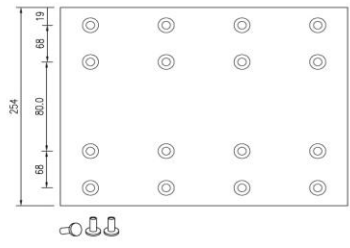BP Ref.	Ref. Original	Descripción	Ilustración	Aplicación
BP19557-190WR		Trommelbremsbelag, 1Set – 8 Stück mit Nieten, 190 mm Brake Lining, 1Set – 8 pieces with rivets, 190 mm Forro de Freno, 1 jgo. – 8 pzas. con remaches, 190 mm		FRUEHAUF, TRAILOR
BP19557-197WR		Trommelbremsbelag, 1Set – 8 Stück mit Nieten, 197 mm Brake Lining, 1Set – 8 pieces with rivets, 197 mm Forro de Freno, 1 jgo. – 8 pzas. con remaches, 197 mm		FRUEHAUF, TRAILOR
BP19574-180WR	BPW 0309214120 BPW 0309214270 BPW 0309214330 BPW 0309214440 BPW 0309214450 KAESSB 8241999686	Trommelbremsbelag, 1Set – 8 Stück mit Nieten, 180 mm Brake Lining, 1Set – 8 pieces with rivets, 180 mm Forro de Freno, 1 jgo. – 8 pzas. con remaches, 180 mm		BPW, KAESSBOHRER
BP19932-190WR	SCANIA 1109003 SCANIA 1516501 SCANIA 1535249 SCANIA 1535253 SCANIA 551124 SCANIA 551138 SCANIA 551162 SCANIA 551192 SCANIA 552114	Trommelbremsbelag, 1Set – 4 Stück mit Nieten, 190 mm Brake Lining, 1Set – 4 pieces with rivets, 190 mm Forro de Freno, 1 jgo. – 4 pzas. con remaches, 190 mm		SCANIA BUS 3, SERIES 3 AND 4
BP19933-190WR	SCANIA 1535250 SCANIA 1535254 SCANIA 551125 SCANIA 551139 SCANIA 551163 SCANIA 551180 SCANIA 552116	Trommelbremsbelag, 1Set – 4 Stück mit Nieten, 190 mm Brake Lining, 1Set – 4 pieces with rivets, 190 mm Forro de Freno, 1 jgo. – 4 pzas. con remaches, 190 mm		SCANIA BUS 3, SERIES 3 AND 4, C/N